



MULTIPAGE SPECIFICATIONS

On-Premise Paging

Features


The MultiPage Transmitter can be used to transmit to the following receivers: The Wireless UHF **Display**, Vibrating **Pagers**, and the **Informant**. The MultiPage LCD screen displays two lists: The first list consists of the numbers being shown on the UHF Wireless Display. The second list shows the Pagers waiting to be re-paged.

Operation

Simply plug the power adapter into the back of the MultiPage and it is ready to use. To enter a number on the Wireless UHF Display, type the number and press "**ENTER**." To send a page to a Vibrating Pager, type the number of the Pager you wish to page and press "**SEND**," then follow the on-screen prompts. To remove numbers from the Wireless UHF Display, press "**CANCEL**," then type the number you want to remove and then press "**ENTER**." To remove numbers from the vibrating re-paging queue, press "**CANCEL**," then type the Pager number followed by "**SEND**."



MultiPage Transmitter

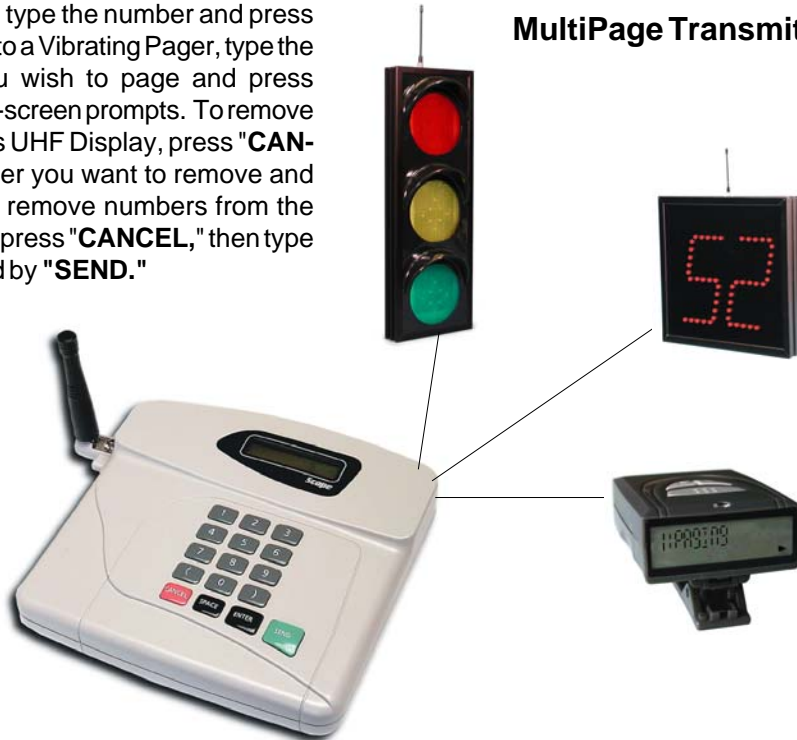

MultiPage Specifications

Dimensions	9" x 7.25" x 1.75"
Frequency	457.575 MHz
TX Baud Rate	512 or 1200
Distance Range	1/4 to 1/2 Mile Indoors
FCC Approval No	JRNUSASERILINK
Mounting	Flat surface
Maximum Numbers shown on Display	20
Maximum Pagers in Re-Page Queue	30
Auto Delete Time	0-25 minutes(user-selectable)
Roll Over Time	0-9 seconds (user-selectable)

Support and Sales
800-635-3811

Microframe® Corporation
www.microframecorp.com

P.O. Box 1700
Broken Arrow, OK 74013