



# MODEL 260 SPECIFICATIONS


## Remote Display

### Features


The Model 260 Remote Display is designed to operate with any standard RS232, RS485, or 20 mA current loop input to provide Remote Display capabilities for a computer, PLC, or scale display. The Model 260 Display has 5.5-inch tall digits viewable up to 125 feet and is encased in an aluminum extruded cabinet.

### Operation

The computer passes numbers and a carriage return (ASCII 13D), and then the numbers will be displayed on the Model 260. To display a blank screen, pass a carriage return (ASCII 13D). Insert the decimal point in the number string and it will light. Include a colon in the number string to light the colon for that number. Leading zeros will be blanked if the user selectable option is enabled.

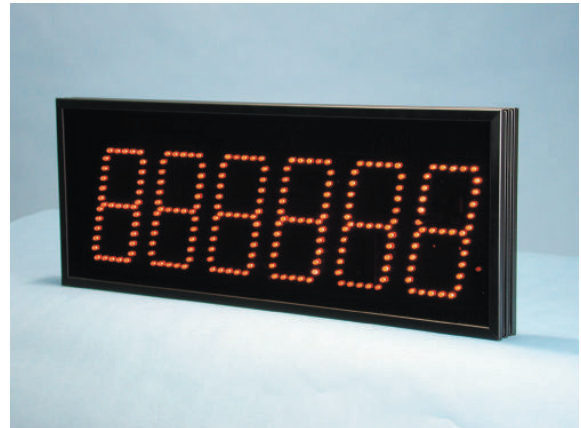

Microframe® Model 260 Display

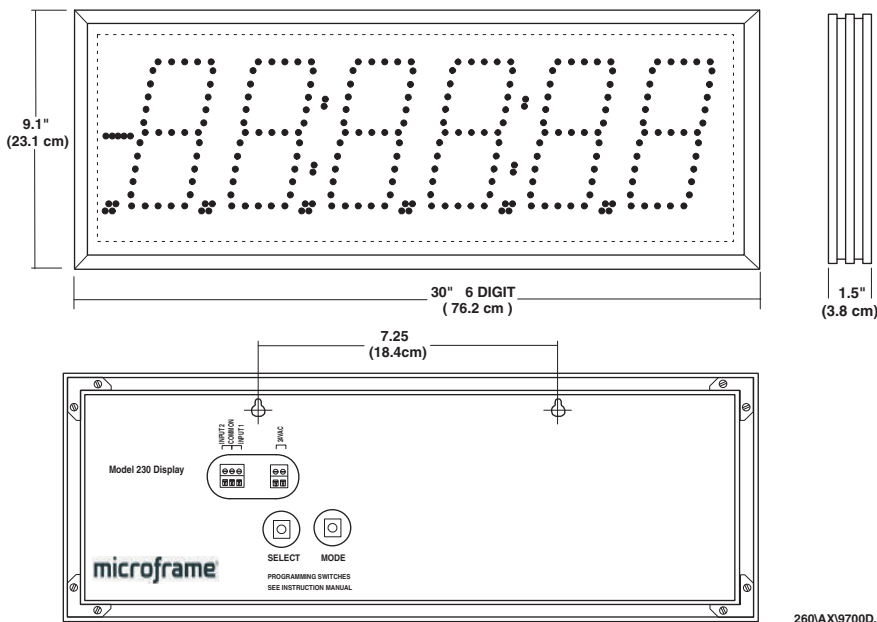

### Model 260 Specifications

Protocol .....	RS232, RS485, or 20 mA
Power Input Requirements .....	24 VAC or DC @ .15 Amps
Baud Rate.....	1200 to 9600 User Programmable
Maximum Number of Addresses .....	99 Different Display Addresses
Digit Height .....	5.5 Inch (14 cm)
Character Viewing Distance .....	125 Feet in Normal Light
Case .....	Aluminum Case with Plexiglas Faceplate
Operating Temperature.....	-20° C to 60° C or -4° F to 140° F
Weight .....	5.25 Pounds (2.4 kg)

**Support and Sales**  
**800-635-3811**

Microframe® Corporation  
[www.microframecorp.com](http://www.microframecorp.com)

P.O. Box 1700  
 Broken Arrow, OK 74013