



UHF DISPLAY SPECIFICATIONS

On-Premise Paging

Features

The UHF Displays are designed to work best with the Microframe MultiPage System. The Displays have two modes:

- 1) As a "Visual-Pager," the Display will store and rotate up to 20 numbers at a time. Numbers can be entered and deleted from the Display using the MultiPage Transmitter.
- 2) The Display can also be used as a "Pager Confirmation System." In this mode, the Display shows the number of every Vibrating Pager that has been paged.




UHF Display

Operation

Mode 1) Using the MultiPage Transmitter, simply type in a number and press "ENTER" to send that number to the Display. To delete a number from the Display, simply press "CANCEL" then type the number followed by "ENTER."

Mode 2) The number of any Pager that is paged shows on the Display. No operator intervention is required.

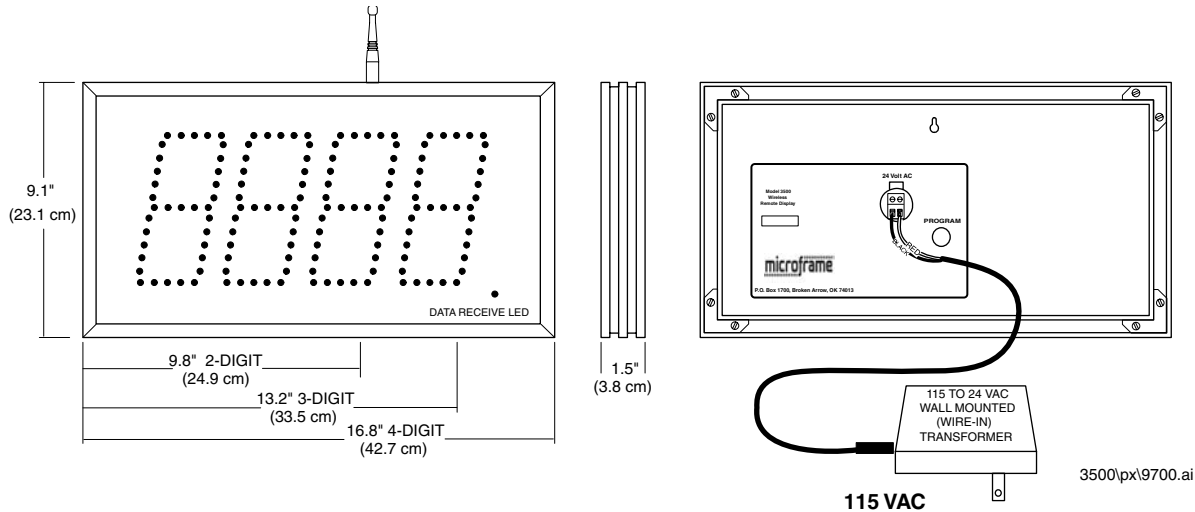

UHF Display Specifications

Frequency	457.575 MHz
TX Baud Rate	512 or 1200 auto learning
Distance Range	1/4 to 1/2 Miles
Mounting	Wall Mount or Ceiling Mount
Character Height	5.5"
Viewing Distance	125 feet indoors
Power Supply	16 to 24 VAC
Weight	2-Digit, 2.5 Lbs (1.1 kg)
	3-Digit, 3 Lbs (1.4 kg)
	4-Digit, 3.5 Lbs (1.6 kg)
	6-Digit, 5.25 Lbs (2.4 kg)

Support and Sales
800-635-3811

Microframe® Corporation
www.microframecorp.com

P.O. Box 1700
 Broken Arrow, OK 74013