



DATATRACK SPECIFICATIONS

Remote Display

Features


The DataTrack Transmitter features individual call buttons that can transmit to any of 14 on-site pagers. When a call button is pressed, a red light will appear in the corner of the button pressed to confirm a page was sent. Available for desktop or wall mounting.

Operation

The DataTrack One-Touch Paging System is designed to page wait staff with the simple press of a button. Names of servers may be written in the white boxes provided using wax pencils. To send a page to a server, press the corresponding name, and a page will be transmitted directly to their individual pager. Upon request, pagers can be programmed to display pre-defined text messages such as "order ready," "bar," and "host stand." Messages are limited to 12-characters including spaces. Multiple transmitters can be added, allowing data to be sent from any desired location.



DataTrack Transmitter

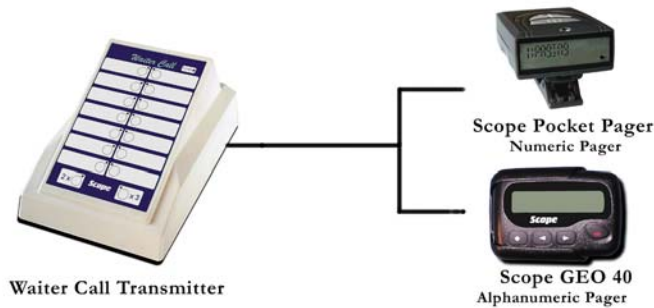

DataTrack Specifications

Operating Voltage	12 to 13.8V dc
Power Consumption	Less than 200 uA (micro Amp) standby, 300 mA transmit
Frequency Range	450-470 MHz
Channel Spacing	25 KHz or 12.5 KHz
TX Baud Rate	1200
Distance Range	1/4 to 1/2 mile
FCC Approval No.	JRNUSADATALINK
Mounting	Desk or Wall Mounted w/optional bracket

Support and Sales
800-635-3811

Microframe® Corporation
www.microframecorp.com

P.O. Box 1700
Broken Arrow, OK 74013