

Model 5240 Specifications



Specialty Timer Display

DISPLAY FEATURES	
Mounting	Wall Mount
Case	Black Aluminum Extrusion with dark red plexiglas faceplate
Character Size	5.5-inches (14 cm)
Display Width	16.8 inches
Display Height	9.1 inches
Weight	3.5 lbs
Power Requirements	24 VAC 1.2A Supplied by Adapter which requires 115 Volts AC @ 0.72 Amps, 4.6 Watts
Viewing Distance	125 feet indoors
Temp	-20°C to 70°C or -4°F to 158°F
SUPPLIED ACCESSORIES	
	24 VAC 1.2A Power adapter, remote control, 2 push buttons, 40 feet of 22 AWG 2-conductor wire




Features

The 5200 Series Display is a 2-, 3-, 4-, or 6-digit intelligent LED Display with infrared capabilities. Each Display has two inputs for push buttons or logic controls and a communications link for communicating with slave Displays. Displays are powered by a 24 Volt AC power adapter (included). This Display is an event counter that advances a count by a selected time interval. The range for the timer is 0-999999 (limited to the number of digits the Display shows). The Specialty Timer can be set to count by seconds, minutes, hours, or days.

Common uses include:

- Days accident free
- 90-minute countdown
- Count down to New Year's Day (by Days, Hours, etc.)
- Variable length process time in seconds or minutes

Displays include a built-in audio chime and remote control.

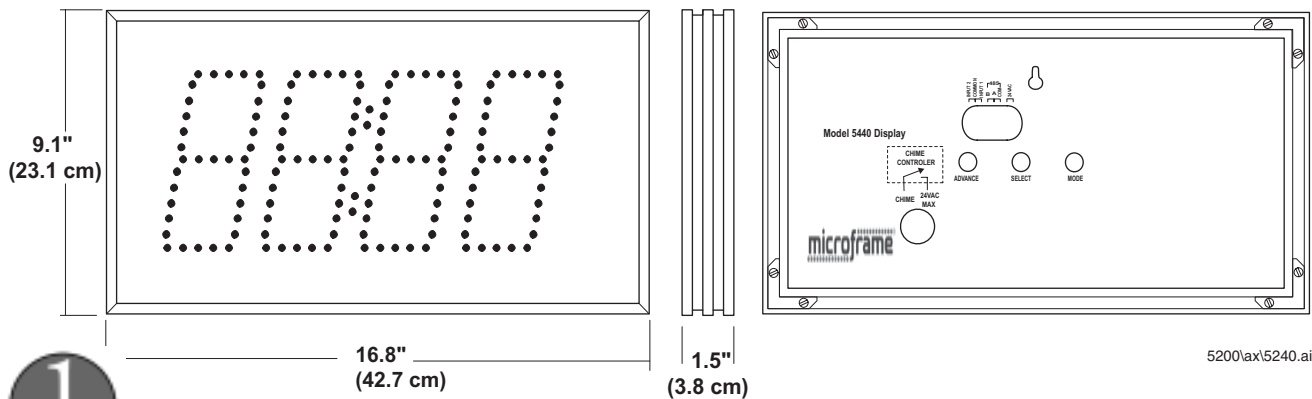

5200\ax\5240.ai



Support and Sales
800-635-3811