



MODEL 920, 930, 940, and 960 SPECS Remote Displays


Operation

The 920, 930, 940 and 960 Remote Displays are designed to operate with the Model 906 Keypad or Model 6200 Timer Keypad. The Remote Display receives power and signal from a single cable connected to the Keypad and is turned on or off with the Keypad power switch.



Microframe® Model 960 Display

Model 920, 930, 940 and 960 Remote Displays

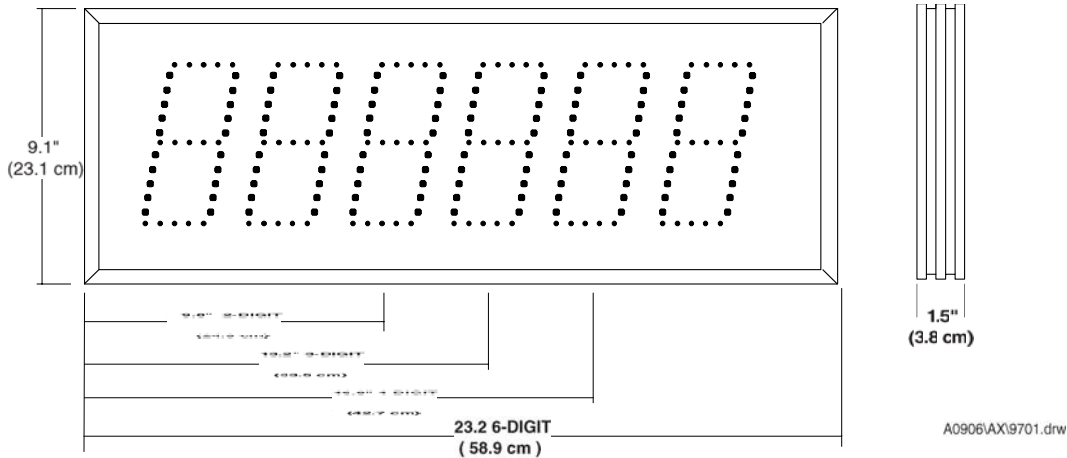

Model 920, 930, 940, and 960 Specifications

Remote Display	Wall mount 5.5" Tall LED Display
Maximum Distance	2,000 feet = 1 Display 300 feet = Full Load of Displays using 16 AWG Paired Wire
Maximum Number of Displays	Up to 12 two-digit displays, 9 three-digit displays, 7 four-digit displays, or 5 six-digit displays without an additional booster amp
Power Input Requirements	Power supplied by Keypad
Character Viewing Distance	125 Feet in Normal Light
Case	Aluminum Case with Plexiglas Faceplate
Weight	2-Digit 2.5 Lbs (1.1 kg), 3-Digit, 3 Lbs (1.4 kg) 4-Digit, 3.5 Lbs (1.6 kg), 6-Digit, 5.25 Lbs (2.4 kg)

Support and Sales
800-635-3811

Microframe® Corporation
www.microframecorp.com

P.O. Box 1700
Broken Arrow, OK 74013