



MODEL 910 SPECIFICATIONS

Keypad

Features

The Model 910 Keypad is designed to operate in four or six-digit mode, supporting the full range of 900-Series Displays. User options include Variable Rollover Time, Automatic Delete, and Manual Advance.

Operation


Once a number is entered into the Keypad, the number is sent immediately to the Remote Display. The Keypad will store up to 32 numbers and display them sequentially until the operator deletes them.

In 4-Digit mode the keypad will show numbers from 0 to 9999. This mode is compatible with 920, 930, 940, 941, and 942 Remote Displays.

In 6-Digit mode the keypad will show numbers from 0 to 999999. This mode is compatible with 960 Remote Displays.



Microframe® Model 910 Keypad

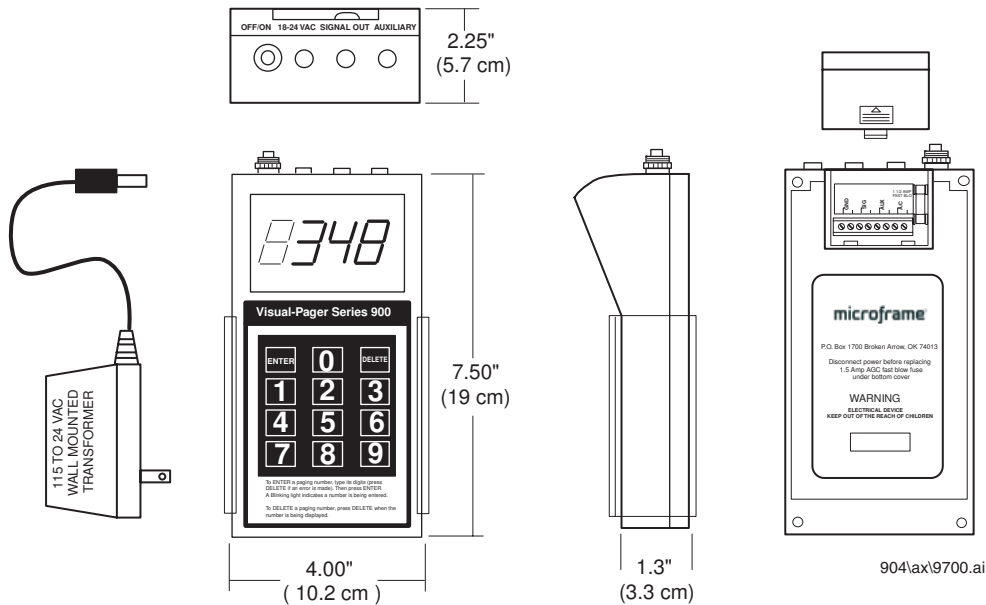

Model 910 Specifications

Local Keypad Display	Backlit LCD screen
Maximum Numbers Stored	32 numbers
Maximum Keypads in System	32 keypads
Input Power	115 VAC into power adapter
Power Adapter	24 VAC, 1.2A standard, 2.5A optional
Line Frequency	50 or 60 Hz
Fuse Requirements	1.6A fast-acting fuse (5mm x 20mm) or 2.5A
Weight	0.75 lb (0.4 kg), with transformer 2.25 lb (1.0 kg)

Sales and Support
1-800-635-3811

Microframe® Corporation
P.O. Box 1700
Broken Arrow, OK 74013
www.microframecorp.com