

# Hymn Boards

## BENEFITS

- No plastic numbers to lose
- Load hymn numbers in one minute
- Easy to use and low in maintenance
- 5.5" character LED's provide high visibility
- Simple to install with wall mount keyhole in rear cabinet
- Provides quick and easy communication to your congregation

## APPLICATION

Microframe offers both wired and wireless hymn boards. The Hymn Board keypad/transmitter is used to enter all the hymns to be sung in chronological order. During the worship service, the person operating the Hymn Board can simply delete a number to advance to the next hymn.

## DISPLAY OPTIONS


Both systems offer displays in 2, 3, or 4-digit versions with 5.5" tall characters for visibility up to 125 feet. Multiple displays can be purchased to enhance viewing in various locations throughout the facility. All displays come in attractive black aluminum cases.

## WIRED HYMN BOARDS

The Wired Visual-Pager® keypad is about the size of a hand-held calculator and supplies power to the display. The keypad display allows the operator to see what number is being displayed at any given time. Up to 32 Keypads can be used with each wired display, allowing keypads to be placed in various locations. The displays can be wired up to 2000 feet away from the keypad.

## WIRELESS HYMN BOARDS

The Wireless Visual-Pager® is ideal for applications where mobility is important or hardwiring is not an option. This wireless system requires AC power at both the transmitter and the display. This 460 MHz system performs well in open-field testing (up to 2 miles in optimum conditions). The maximum range is estimated between ¼ and ½ mile.

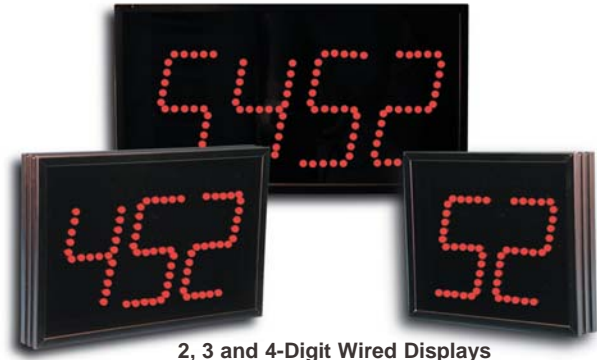

2, 3 and 4-Digit Wired Displays  
 6-digits also available



3-Digit Wireless System

## WIRED SYSTEM

2-Digit Display System (Model 9204)	\$468
3-Digit Display System (Model 9304)	\$498
4-Digit Display System (Model 9404)	\$538
6-Digit Display System (Model 9604)	\$618
Additional Keypad(s) (Model 904)	\$249

\* Systems include Display, Keypad, and 100 feet of wiring.

## WIRELESS UHF SYSTEM

2-Digit Display System	\$698
3-Digit Display System	\$748
4-Digit Display System	\$798
6-Digit Display System	\$848
Additional Transmitter(s) (Model B3010)	\$399

\* Systems include with UHF Display and Transmitter.

