

RESTAURANT PAGING SOLUTIONS

for casual-dining restaurants



Microframe's Visual-Pager® is a restaurant paging solution ideal for a wide range of foodservice establishments. The Visual-Pager is especially suitable for use in delicatessen, cafe, bakery, fast food, quick service, pizza parlor, sports bar, and other casual-dining settings.

Customers appreciate a more efficient paging method for food pickup.



“At Microframe your **satisfaction** is more important than a sale.”

THE MICROFRAME VISUAL-PAGER®

The Visual-Pager by Microframe silently pages customers to the pickup counter when their order is ready. Food is served promptly without the hassles or noise of a PA system. The result is quicker more efficient service and a higher level of customer satisfaction.

When the customer's food is ready, the person working the pickup counter simply enters the order number in the provided keypad. The order number then appears on the display(s) located in the restaurant. Once the food is picked up, the order number can be deleted by the keypad operator, or the display can be set to automatically delete the number after a specified amount of time.

- Silently notify customers when their food is ready
- Eliminate loud disturbances of PA announcements
- Reduce congestion around food pickup counter
- Increase quick, smooth pickups at the food counter

COMPUTER-CONTROLLED OPTIONS

Microframe will work with your software provider to integrate the Visual-Pager with any POS system, making it completely automatic. When the order is filled and the bumper bar has been pressed, the order number will immediately appear on the display(s). The order numbers can be set to automatically delete after a specified amount of time (between 1 and 9 minutes), or when the user chooses to manually delete the number.

Displays can be purchased with or without the “NOW SERVING” lettering.



FREE TECH SUPPORT AND PRODUCT CONSULTATION

Our expert customer service representatives and engineering experts are available to assist you at any time—even after the sale. They will not only help you decide which system will work best for you, but they will also stick with you every step of the way.

30-DAY MONEY-BACK GUARANTEE AND PRODUCT WARRANTY

Try any Microframe Visual-Pager for 30 days. If you are not completely satisfied, simply return it to receive a full refund.* Microframe provides a 1-year factory warranty against defects in material or workmanship on all Visual-Pagers.

* Full refund is contingent upon the receipt of the product in original packaging and excludes shipping charges.

www.microframecorp.com

Call Toll-Free 1-800-635-3811

Microframe Corporation • P.O. Box 1700 • Broken Arrow, OK 74013

Microframe, Visual-Pager, and Rx Ready are Registered Trademarks of Microframe Corporation



MKRS_CD13_0804


FUNCTION

The Visual-Pager is a low-cost solution to your on-premise paging needs. It silently and discreetly pages people to the pickup counter when their food is ready. Simply enter the person(s) assigned number into the provided keypad, and the number immediately appears on the display(s). With no batteries to replace or additional parts to buy, the Visual-Pager is virtually maintenance free and it's easy to install.

DISPLAY OPTIONS



The **900 Series** and the **3500 Series** (wireless) both offer displays in 2-, 3-, and 4-digit versions with 5.5" tall characters for visibility up to 125 feet. These displays can rotate up to 30 numbers at a time. Numbers can be set to automatically delete after a specified amount of time (between 1 and 9 minutes of display time).

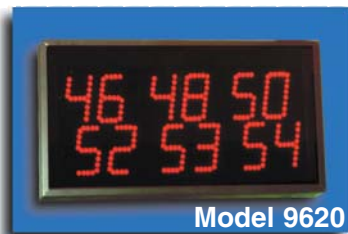

Displays for the **9620 Model** feature six 2-digit numbers. These 2.5" tall characters are visible up to 80 feet. This model is ideal for paging multiple customers simultaneously. Numbers can be

set to automatically delete after a specified amount of time (between 1 and 9 minutes of display time).



Displays for the **9430 Model** feature four 3-digit numbers. These 2.5" tall characters are visible up to 80 feet. This model is ideal for paging multiple customers simultaneously. Numbers can be set to

automatically delete after a specified amount of time (between 1 and 9 minutes of display time).



MKRS_CD13_0804

VISUAL-PAGER COMPONENTS

Visual-Pager systems come complete with a display and a keypad that drives the system. The 900 Series and the Model 9620 also includes the wiring necessary for installation. All displays come in attractive aluminum cases with red Plexiglas front panels. These cases are black anodized for scratch-resistant purposes.

Additional components can be purchased individually. Multiple displays enhance viewing while additional keypads allow you to page guests from different locations (i.e. page guests from the kitchen, the food pickup counter, or the bar).

VISUAL-PAGER KEYPAD

The Visual-Pager keypad is about the size of a handheld calculator. It features an LCD display allowing the operator to see what number is being displayed at any given time. Up to 32 keypads can be used with each display, allowing keypads to be placed in various locations. The operator at any keypad may enter or delete numbers from the display(s) simultaneously.



PROGRAMMABLE OPTIONS

When multiple numbers are being displayed, the length of time each number appears on the display is determined by the user. Display time intervals may be selected from 0 to 9 seconds. When 0 is selected the numbers do not rotate. Instead, a single number is displayed until the delete button is pushed and the next number appears. This continues until all numbers have been shown and deleted. Another programmable option is the automatic delete command. Entries may be set to automatically delete after 1 to 9 minutes of display time, eliminating the need to remember to delete a page.

INSTALLATION RANGE

When installing a 900 Series or a Model 9620 Visual-Pager, the range between the display(s) and the keypad(s) can be extended over 1,000 feet. The range of the 3500 *Wireless Series* is 1/4 to 1/2 mile.

We have found that the wireless version will work in most deli, cafe, and restaurant settings. This eliminates the need for an electrician to run wiring. Installation is easy with this "plug and play" system. The wireless display hangs on a single screw and plugs into an AC outlet. The keypad comes with a transformer that also plugs into an AC outlet.

www.microframecorp.com

Call Toll-Free 1-800-635-3811

Microframe Corporation • P.O. Box 1700 • Broken Arrow, OK 74013

Microframe, Visual-Pager, and Rx Ready are Registered Trademarks of Microframe Corporation